


FOR TYPICAL CABINET LOADINGS .
FASTEN CABINET TO PANELS FOLLOWING CABINET
MANUFACTURER'S RECOMMENDATIONS.
FOR EXTREME CABINET LOADS CONSULT PREMIER
BUILDING SYSTEMS BEFORE INSTALLATION.

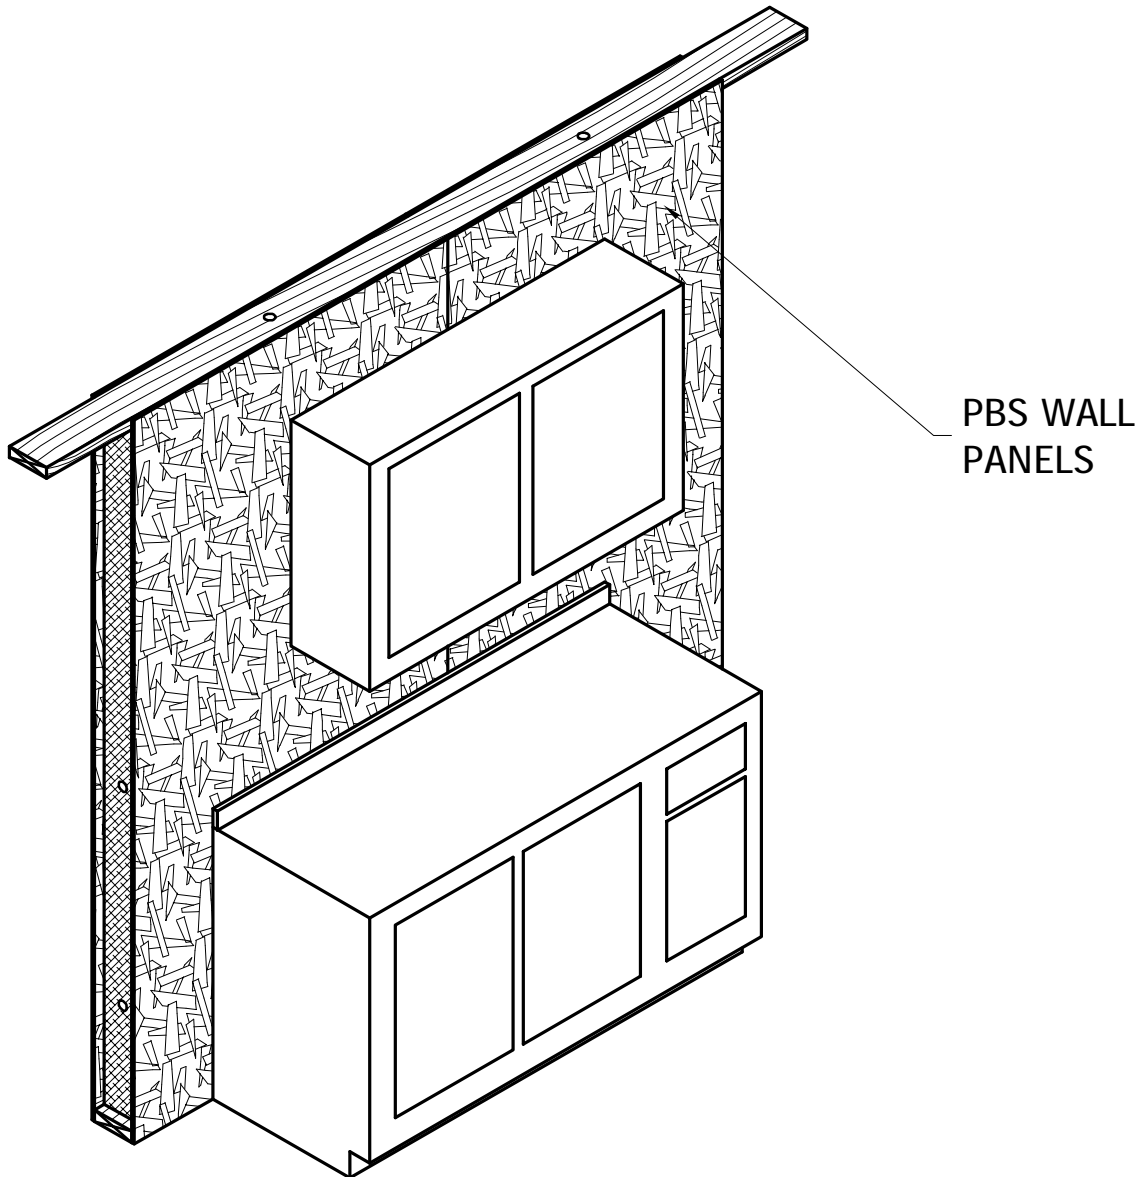

TYPICAL CABINET CONNECTION
PREMIER BUILDING SYSTEMS

8-17-07