


PBS FLOOR,
WALL, OR ROOF
PANEL

PREMIER SPLINE

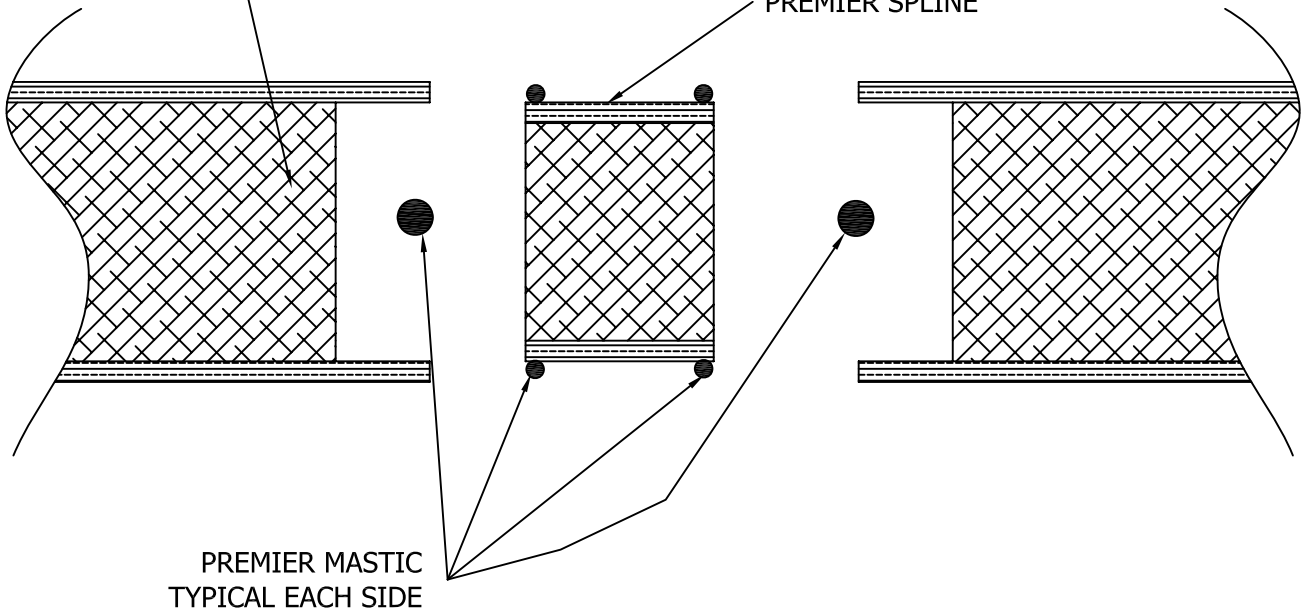

1/8" GAP

FASTEN SPLINES WITH
8d NAILS @ 6" O.C.
OR EQUIVALENT. U.N.O.

SIP TAPE ON (WINTER) WARM SIDE OF PANEL

REFER TO TECHNICAL BULLETINS #28 &
#32 FOR SIP TAPE APPLICATION

PBS-005

PREMIER SPLINE CONNECTION

11-9-10

PREMIER BUILDING SYSTEMS