


FOR TYPICAL CABINET LOADINGS .  
FASTEN CABINET TO PANELS FOLLOWING CABINET  
MANUFACTURER'S RECOMMENDATIONS.  
FOR EXTREME CABINET LOADS CONSULT PREMIER  
BUILDING SYSTEMS BEFORE INSTALLATION.

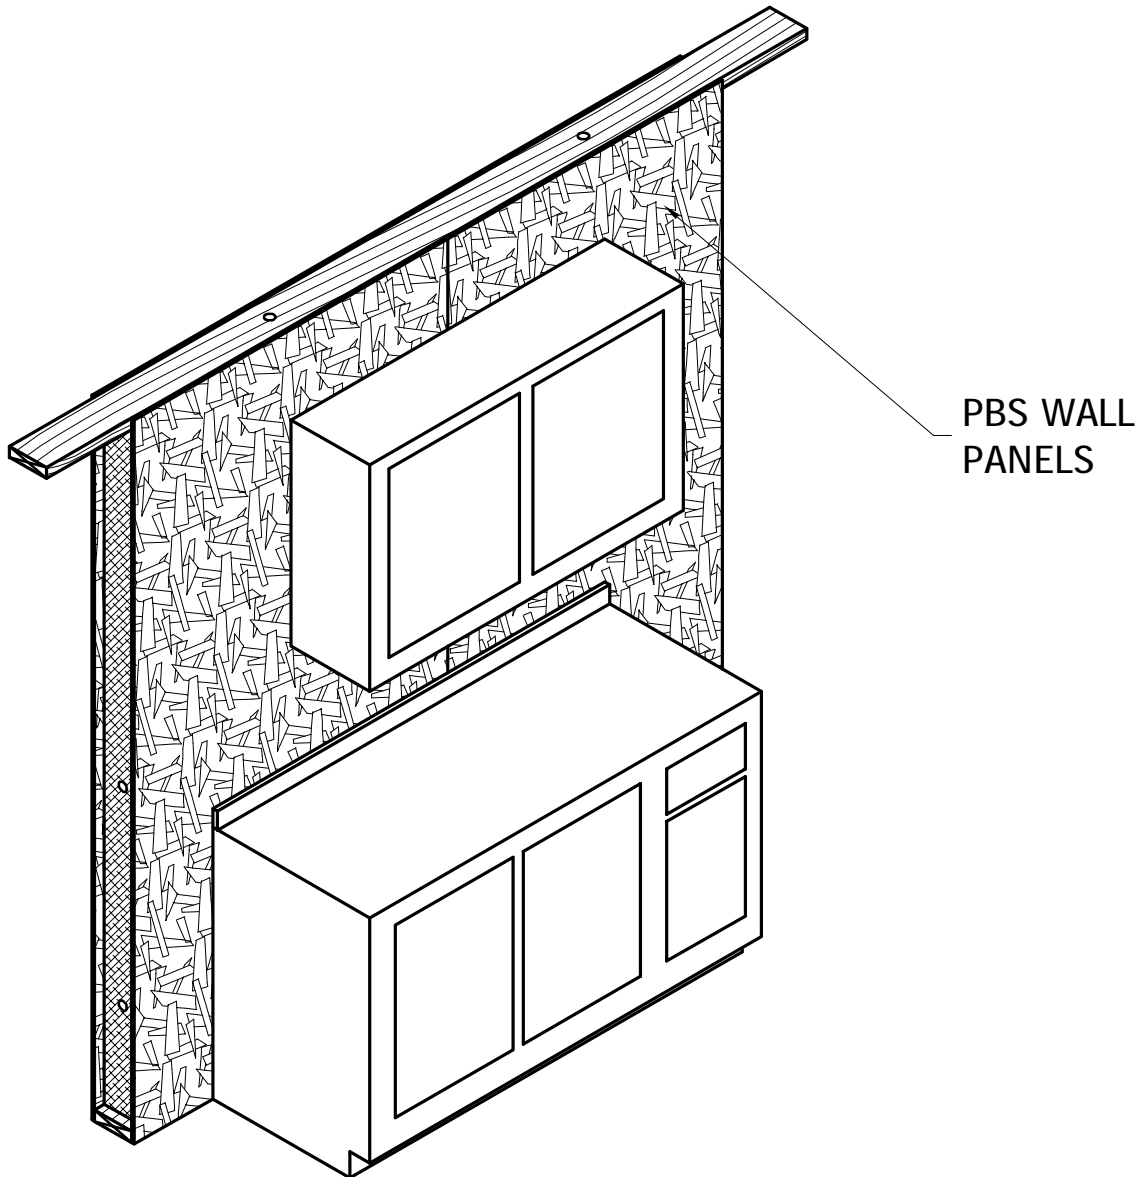

TYPICAL CABINET CONNECTION  
PREMIER BUILDING SYSTEMS

8-17-07